

# CEILING MOUNTING: ACCENT BAFFLES WITH EYEBOLT MOUNTING

## APPLICATION


For ceiling mounting Accent Baffles with Eyebolt Mounting.

## DESCRIPTION


This installation uses a threaded eye bolt fastened to a factory installed threaded insert (TI). Installation is as follows:

1. Handle the Accent Baffle very carefully. If the Baffles are wrapped in packaging, leave them wrapped until they are installed.
2. Each eyebolt should have two locking nuts as shown in the Mounting Detail. Make sure the locking nuts are screwed tightly to the base of the eyebolt at the upper end of the threads.
3. Screw the eyebolts into the threaded inserts until the locking nuts are snug against the threaded insert - stop tightening - DO NOT OVERTIGHTEN. There is no need to tighten the eyebolts beyond snug.
4. Accent Baffles should be installed with a minimum of 2" between the baffles.

## MOUNTING DETAIL

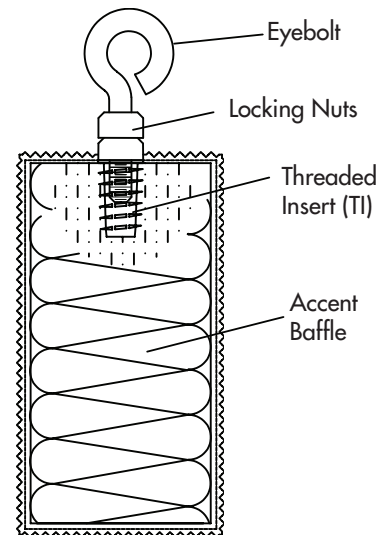

## EYEBOLT




1/4" 20 Eyebolt

## LOCKING NUT



## THREADED INSERT LOCATIONS

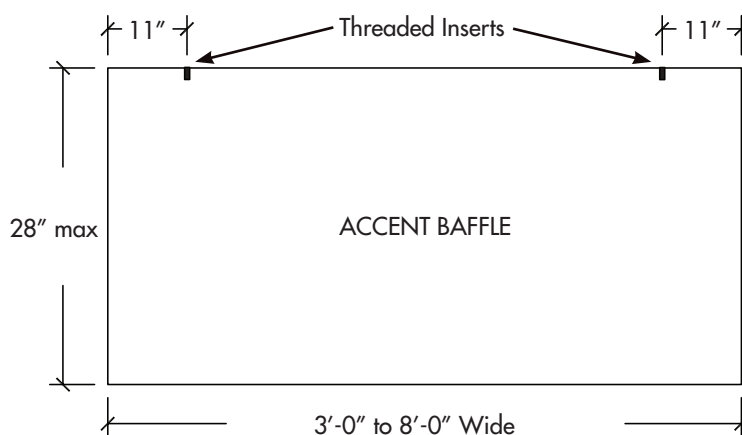

*Controlling Sound Beautifully*