

CEILING MOUNTING: SNAP-ON ROTOFAST, 1-2" PANELS

APPLICATION

For mounting 1"-2" fabric covered fiberglass acoustical panels to ceilings in "applique" installations only. **Do not use with painted acoustical panels.**

DESCRIPTION

This installation technique uses a Snap-On Rotofast with ratchet. The ratchet is designed to fit tightly inside the Rotofast for a snug, secure fit. The panel will fit tightly to the mounting surface. Installation is as follows:


1. Locate the mounting location on the back of the panel.
Rotofasts should be mounted 6"-8" from the edge with the following requirements:

PANEL SIZE	# OF ROTOFASTS
2'x2' to 4'x4'	4
larger than 4'x4' to 4'x6'	6
larger than 4'x6' to 4'x8'	8


2. Screw Rotofast Snap-On Anchors into the back of the panel using the Rotofast Driver Tool, **by hand only. Do not overtighten.**
3. Insert Marking Plugs into the Snap-On Anchors.
4. Push the panels against the ceiling to mark anchor locations.
5. Screw Ratchets to ceiling at marked locations (#8 screw recommended).
6. Firmly push panels onto Ratchets to complete installation.

MOUNTING DETAIL

Elevation

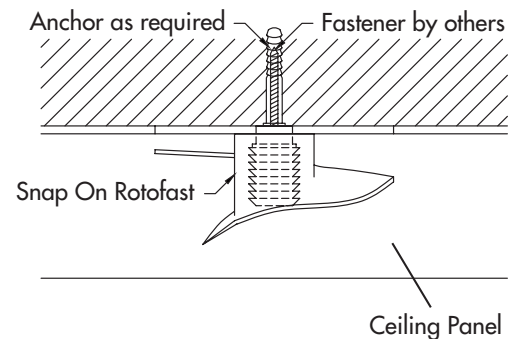


Snap On Rotofast

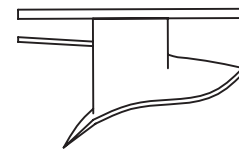


Ratchet



Marking Plug



Rotofast Driver Tool

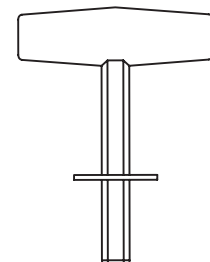

Controlling Sound Beautifully